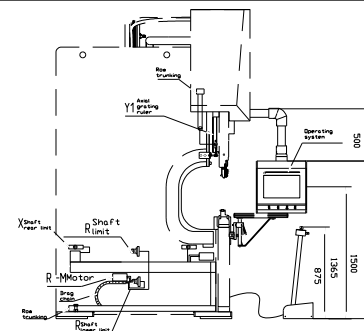
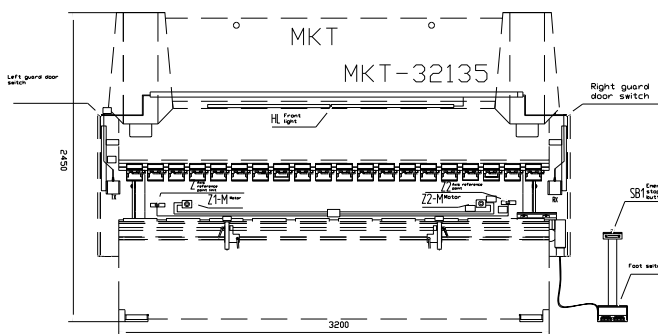
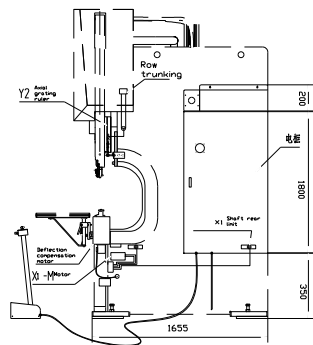


Power-on installation precautions

1. All external cables must run through trunking or bellows, and no cable is allowed to be exposed.
2. Arrange and install cables in strict accordance with the circuit diagram. All external cables must be marked according to the cable number, and the use of marks at both ends must be clear and firm.
3. The wiring cable must remain slack.
4. Hydraulic oil filling 46 # anti-wear hydraulic oil.

MTK		MTK-32135	
Circuit layout			